




ATTACHING THE NOREC COMPENSATOR

FIRST STEP:

Slide one of the crush washers onto the thread at the front end of the barrel and screw on the compensator by hand

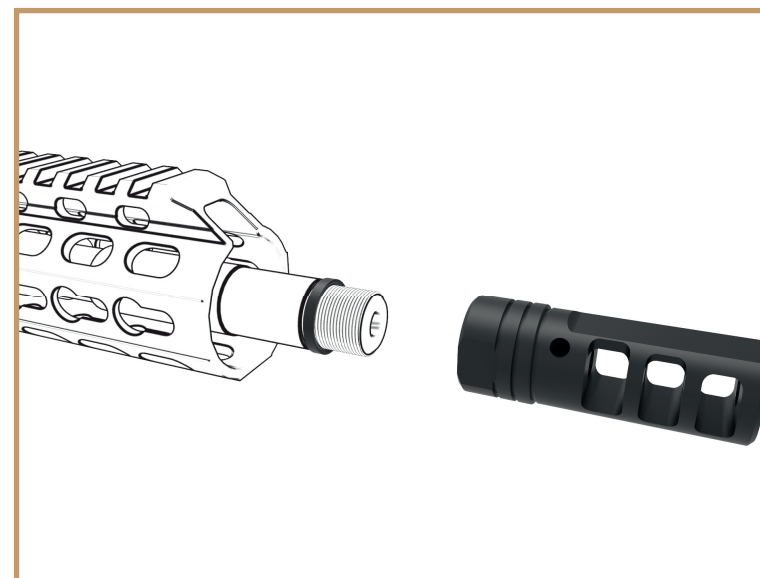

SECOND STEP:

Now, tighten the compensator with a suitable tool until the crush washer is compressed and both 45° ports are pointed upwards.

